


## **Operating Instruction**

## **Tube assembling**

## Tube assembling manifi olds & connector interfaces

The fi xing nose-pieces are arranged in pairs in a row. The corrugated tube must be laid over both fi xing nose-pieces. Slit tubes may not be twisted.

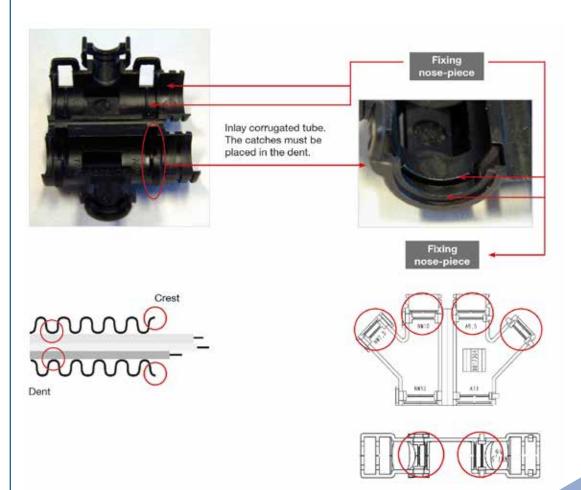



Catches

The Corrugated tube must tower above the catches approx. 1 ½ - 2 crests to guarantee ideal fixation.

Any questions left?

Visit our website at www.schlemmer.com or write us an e-mail at info@schlemmer.com

**Schlemmer Group** 

info@schlemmer.com www.schlemmer.com